

# THERMOPLASTIC / POLYMORPH



## Heat it

Combine boiling water and Plastimake.


At 60°C (140°F) your Plastimake will transform into a soft, transparent blob.



## Wait for It

Remove Plastimake from hot water.

Let it cool until you can comfortably touch it with your bare hands.

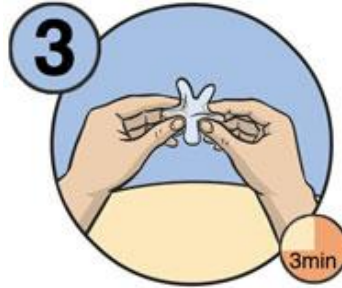

## Shape it

Mould Plastimake with your hands.

**Be careful**, there may still be pockets of hot water in your Plastimake blob.



## Cool it

Dip your Plastimake item in ice water.

This is optional, but it will stop your item drooping as it cools.



## Enjoy it

Keep your Plastimake item away from heat and it will last for years.

If you're not satisfied with your creation, reheat it and try again!



Shaping By Hand



Colouring